TM889 USER'S MANUAL

B type

T&T Industries Co., Ltd.

This manual provides detailed operation instructions and features to enhance your product enjoyment. Please read this manual carefully before using this product for the first time.

CAUTIONS

This player is a highly precise electronic product and is serviceable only by authorized technicians. Please do not attempt to open the unit at your own discretion.

Do not subject the unit to severe impact

Keep the unit from extreme high/low temperatures, high humidity, dust or exposure to direct sunlight

Use damp cloth to clean the unit. Do not use any chemical solution

Please Slide the HOLD switch on the side of TM-889 to the opposite direction of the arrow before operating. Hold function prevents accidental operation or changes to settings while carrying the device in the pocket or briefcase

IMPORTANT

Our Company assumes no responsibility for any damaged or lost data caused by accident resulting from malfunction, repairs or battery replacement. Backing up of all important data on other media to protect against data loss is strongly recommended.

TABLE OF CONTENTS

1. Introduction
Description / Package contents

2. Getting to know your TM889
Name of Parts / LCD Display

3. Connecting to PC
Operating system
Setup Program installation guide
Connecting to PC
Disconnecting form PC
File download/Upload

4. How to use your TM889
Power on/off
Playing Music files
+/- Volume Control
A-B Play Back
EQ mode
Entering Menu
Voice Recording
Voice Play
Line-In
FM Tuner / FM recording
Settings
How to change the power – on Picture
How to display the lyric synchronously
How to protect and use battery

5. To manage your TM889
6. Safety Precaution
7. Troubleshooting
8. Limited warranty
9. Appendix Specification / Features

1. Introduction

1) Description

This MP3 player is multi-functional with high sound quality and low power consumption. It also features EL backlight display, and doubles as removable storage medium.

This player plays back MP3 music with mpeg 1 layer 3compression format. You may download authorized MP3 music from the internet or convert your favorite music from CD to MP3 format using conversion software which you can download from the optimum sound quality. This player also plays back authorized WMA music.

2) Package contents

The package should include the following accessories. Please contact the dealer if any of the listed items is missing from the package.

◇ TM889
◇ User's manual
◇ Installation CD
◇ Neck strap type Earphones
◇ AAA battery / Line in Cable
◇ Remote controller / USB cable

2. Getting to know your TM889 <Name of parts>

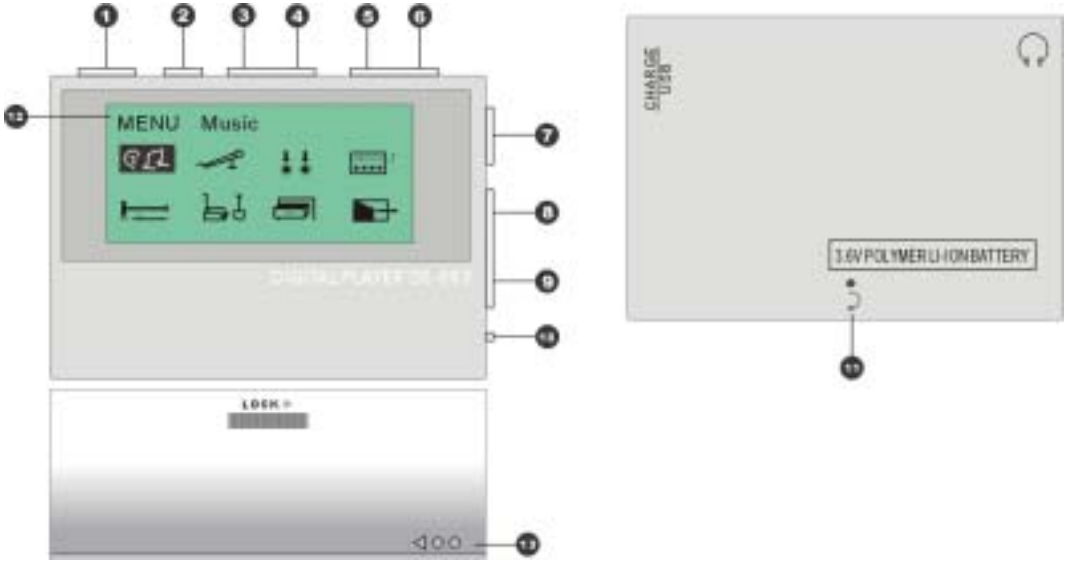

(1) Earphone Jack
(2) Line - in
(3) EQ / REC
(4) MENU
(5) REC / A-B / EQ
(6) Power on/play/Pause/Stop/power off
(7) USB connecting line
(8) PREV
(9) NEXT
(10) MIC
(11) RESET
(12) LCD
(13) Circumscribe the Battery box

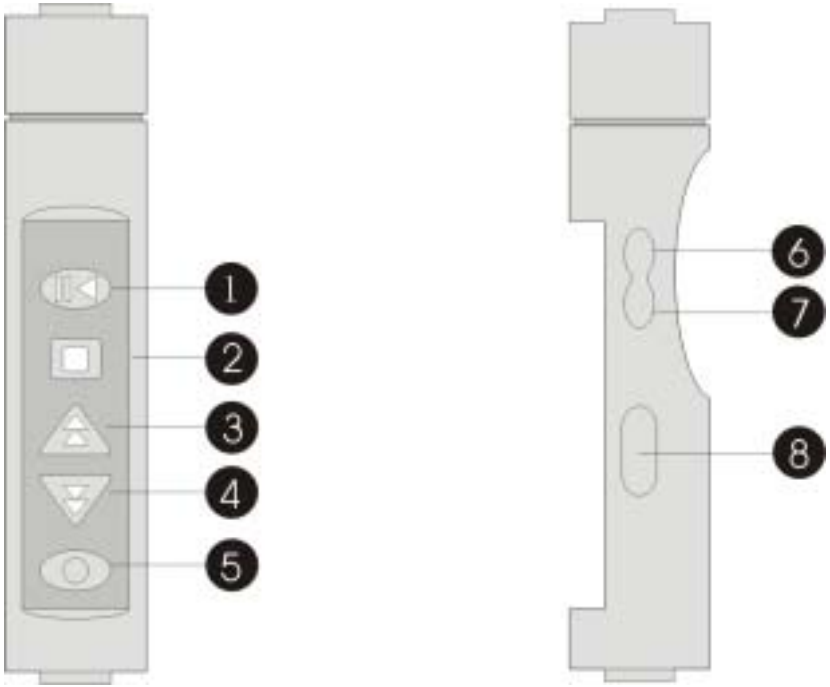

(1) Play / Pause / Stop (3) PREV (5) REC / A-B / EQ (7) Volume + (VOL +)
(2) MENU (Stop) (4) NEXT (6) Volume – (VOL -) (8) HOLD

<LCD Display>

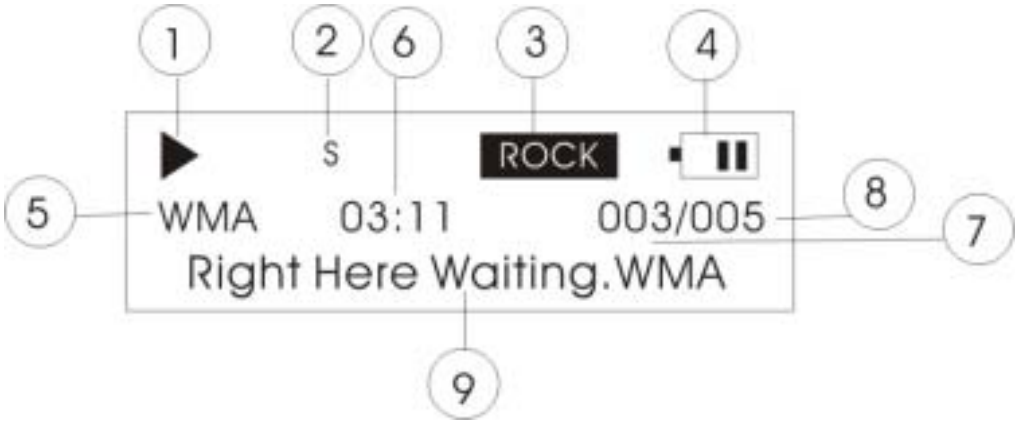

1	open/pause/stop/close ico	6	Played time display
2	Repeat ico	7	Current track number
3	Equalizer ico	8	Total number of Music Files
4	Battery ico	9	Music titld/file name
5	Music type ico		

3. Connecting to PC

◆PC system requirements (minimum)

1) Microsoft® windows 98/me/2000/xp
2) CD-Rom Drive
3) Pentium II 700MHz or above
4) RAM 64MB(windows ME,2000)or 128MB(Windows XP)
5) 20GB HDD Space (more HDD for storing music file)
6) USB port

<Check Points>

Microsoft Windows98 does not provide a USB mass storage feature. Therefore you should install this functionality using the “TM889 Installation CD”.

You have to connect the player after installing the program. After installing Setup program, you can use the Firmware Downloads program as well.

If you use Microsoft windows 2000, and it has been patched with Service Pack 3 or Windows ME/XP User you do not need to install the Setup program. However, in order to use the format or upgrade, you need to install the Setup Program in your PC.

Operating system:

Windows98: you should install the driver by using the TM889 Installation CD.
Windows 2000 or above:
In windows 2000, you have to install the patch with Service Pack 3.
In Windows ME/XP/2003, you do not need to install the Driver.
But if you want to upgrade or format the player, you need to install the Setup Program.

Setup Program installation guide

1. Insert the TM889 Install CD in the CD-ROM of your computer. See the window below.

If it does not run automatically, find and run the ‘SETUP.EXE’ file form your CD.

2. The installation wizard will guide you through the setup.

Warning: Windows 98 users must install the program (driver) before connecting the player to the PC. Please reboot your computer when prompted.

Connecting to PC

Open the cap of your TM889 and connect the USB port to the USB port on your Computer. If the USB port of your computer is positioned in an uncomfortable area. You may use the optional USB extension cord.

Warning: Mp3 player should have the battery when connecting to the PC.
After connecting the player to your PC, backlight will start blinking for a while, then the LCD display shows the player is ready to use. You may start downloading/uploading a file, the backlight will be blinking when the data is transferring until it completes.

Disconnecting form PC

Windows 2000 / ME / XP / users click ‘Stop USB Mass Storage Device Driver’, where your PC screen’s button taskbar before disconnecting TM889 from your computer.

File download / upload

When your TM889 is connected to your computer, it works as a removable hard disk drive in your computer.

You can transfer, copy, paste and delete the data (audio files, voice recorded files, other files) stored in your TM889 simply from your computer.

Warning:

During uploading/downloading files into your PC, please disconnect the player from computer after blinking is finished. If you unplugged during blinking, data may be lost!

4. HOW TO USE YOUR TM889

The player operates differently according to the length of the button pressing.

Power on/off

Press “Power on/Play/pause/Stop/Power off” button over 1-2sec to turn on

Press “Power on/Play/pause/Stop/Power off” button over 2-3sec to turn off

Playing Music files

When you turn on TM889, you can see the music play mode directly. Press “▶/⏸” to play the music or pause. Press “▶/⏸” button for 2 seconds to stop.

+/- Volume Control

When the player is waiting or playing, press “MENU" button shortly and slide “⏭/⏮” button up and down to control the volume

A-B playback

The player plays the desired segment (A-B) repeatedly. This feature is available only when the player is in Playback mode or Playback mode for voice recording file.

Press the “A-B” button briefly to set the starting point (‘A-‘ appears on LCD display). Press the “A-B” button briefly again to set the ending point. Press “A-B” button one more or slide “⏭/⏮” button to cancel.

!) This feature does not work in pause or stop status.

EQ Mode

Press “EQ/REC” button to select the optimum sound of music while playing the music or when in stop.

EQ: Normal, Rock, Jazz, Classic, Pop, Bass

Entering Menu

Press “Menu” button for 3 seconds. The main Menu includes 8 functions (Music, Voice, Line-In, FM Tuner, Setting, Delete, Info, Exit). Slide “⏭/⏮” button to move the cursor and press “Menu” button to go to Sub-menus of selected menu.

Voice Recording

1) In the Main Menu, select “Voice” and press “Menu” button. Press “EQ/REC” button for 3 seconds to start recording. Press “EQ/REC” shortly to stop recording.

2) In the “Stop” mode, press “EQ/REC” button for 3 seconds to start recording. Press “EQ/REC” button shortly to stop recording.

Voice Play

Select Voice Play Mode in the main menu. Press “▶/II” button to play back the voice recorded. Press “▶/II” button to pause or press “▶/II” button for 2 seconds to stop playing.

Line – In

1) Use Line-In cable to connect the source equipment of sound (Max: Source of sound, Min: MP3 player line-in port)

2) In Main Menu, select Line-in and press “Menu” button to select and start. Press “EQ/REC” for 2 seconds to cancel.

Note: files is LXXX.wav

FM Tuner

1) In the Main Menu” mode, slide “⏭/⏮” button to select “FM Tuner”.

2) Press “MENU” button to enter the “FM Tuner” mode, then slide “⏭/⏮” button to

select preset stations.

[1] Auto Scan station

In FM radio mode, press “Menu” button for 3 seconds to go to sub-menu. Slide “⏭/⏮” button to select “Auto Scan station”, then press “Menu” button to start auto scanning stations.

[2] Save Scan Station

In FM radio mode, press “Menu” button for 3 seconds to go to sub-menu. Slide “⏭/⏮” button to select “Save Scan Station”, then press “▶/⏸” button to save the station.

[3] Delete Scan station

In FM radio mode, press “Menu” button for 3 seconds to go to sub-menu. Slide “⏭/⏮” button to select “Delete Scan station”, then press “▶/⏸” button to confirm.

[4] Scan stations manually

Press In FM radio mode, slide “⏭/⏮” button to select the preset stations.

In FM radio mode, press “▶/⏸” to go to manual scanning mode. Slide “⏭/⏮” button to scan the stations manually.

[5] Return music mode

In FM radio mode, press “Menu” button for 3 seconds and select “Music” to return to “Music” mode.

FM Recording

In FM radio stations, press “EQ/REC” button for 2 seconds to start recording FM radio. Press “EQ/REC” button briefly to stop recording and return FM radio stations.

NOTE: files is FXXX.wav

Settings

Press “Menu” button for 3 seconds to go to main menu. In “Main Menu”, slide “⏭/⏮” button to select “Settings”, then press “Menu” button to go to sub-menu. “Settings” has 8 sub-menus (Equalizer, Repeat, Backlight control, Power Off , REC Bit rate, Screen Save, Language, Exit).

*** Equalizer Setup:** Equalizer has 6 EQ modes (Normal, Rock, Jazz, Classic, Pop, Bass).

*** Repeat Setup:** Repeat setup has five repeat options. (Normal, Repeat one, Repeat All, Shuffle, Shuffle Repeat)

*** Backlight Setup:** Backlight Control has five modes (Disable, 5, 10, 15, 20 seconds). It is recommended to set 5 seconds to save power.

*** Power Off Setup:** When the player is not in use, the player turns off its power after 1, 2, 5, 10 minutes automatically to save battery. It does not turn off its power if “Disable” is selected.

*** REC Bit Rate Setup**: (Recording Quality) (16 KHz, 32 KHz, 48 KHz).
Voice recording quality may be controlled in 3 different levels.

*** Screen save setup:** "Screen Save" setup has 2 different kinds of screen savers.
(Man Dancer, Woman Dancer)

*** Language Setup**: Language Setup has 2 Modes (EN: ENGLISH, CN: CHINESE)

*** File Delete:** Press "Menu" button for 3 seconds to go to "Main Menu". Slide "⏭/⏮" button to select "Delete" mode, then press "Menu" button to enter "Delete" mode. In "Delete" mode, slide "⏭/⏮" button to select the file to delete. Press "▶/⏸" button to delete the file. mode, press "▶/⏸" to delete the selected file.

NOTE: The player deletes "Music" file if it is in "Music" playing mode and deletes "Voice" recorded if it is in "Voice" playing mode)

*** Information:** Press "Menu" button for 3 seconds to go to "Main Menu". Slide "⏭/⏮" button to select "Info" mode, then press "Menu" button to see the memory information as follows.

INT: 128MB

FREE: 108MB

How to change the power-on picture

User can use drawing tools (such as Photo Shop or Paint Brush) to make MP3 power on picture you like to see when you turn on the player. Connect the player to your computer and save or copy your own “POWERON” picture or drawing to “POWERON” folder in your player. Disconnect the player from your PC, the “POWERON” picture you made or drew will appear on LCD display. Please note that the file name has to be “poweron”.

Picture file name: poweron.bmp
Picture format: 128X64pixels.
Color: Black-and-white,
BMP format file (Bitmap)

How to display the lyric synchronously

1) How to make lyric file:

There are two ways to make it:

(1) Use Word Pad to edit lyric.

(2) Use professional lyric software to edit.

The importance is that the lyric must be edited according to the playing time.

Format ”[mm:ss]” or ”[mm:ss.fff]”(minute : sec)

mm:minute

ss: seconds

For example : Angel's Tale

[00:00.00]Angel's Tale

[00:12.72]Here in my heart,

[00:17.55]Memories linger,

[00:22.23]I hold them sacred,

[00:28.61]Safe from all others,

[00:32.99]Angel's tale.

[00:42.56]A love such a this,

[00:47.54]Once in a lifetime,

[00:53.17]Lost in your beauty,

[00:58.99]Still dreaming of you,

[01:05.32]Angel's tale.

[01:12.58]You drove the sinner from me,

[01:19.57]And shone with such glary,

……

[04:49.74]make : xxy 2004.2.6

NOTE : Use Word Pad tool to edit, then save the file after finishing editing, choose ALL FILES in file type, the file extension name must be *.lrc in the saving dialog box.

File Name: XXX.lrc (please make sure to put .lrc as an extension)

File Type: All Files (please make sure to select All Files, not Text File)

2) In mp3 player, the name of song must be the same as the name of lyric files, and also

they must be in the same folder. The extension of song files maybe *.mp3 or *.wma, while the extension of lyric files must be *.lrc.

For example: yesterday once more.mp3 and yesterday once more. Lrc

How to protect and use battery

A. Internal battery

The internal battery is made of Li polymer.

Recharging:

(1) Turn off the MP3 player.

(2) Take off the external battery.

(3) Connect the mp3 player to PC with USB cable. The recharging begins.

Note: The player recharges faster when the mp3 player is turned off.

B. External battery: AAA battery

C. When you connect external battery to the mp3 player, you do not have turn off the mp3 player. The external battery should be used before the internal battery.

Note:

(1) Recharging current:

Constance current—60mA, this can extend the live of internal battery.

(2) During the recharging status, the voltage of internal battery must be below 4.2V, otherwise the mp3 player will stop recharging to protect the battery

5. To manage your TM889

Follow the instructions below to Firmware Download.
1) Be sure to backup your important files in your unit before Firmware Downloading.
2) Connect the unit into the USB port.
3) Execute Start -> Program -> Sigmatel MSCN Audio Player->Firmware Download.

6. Safety Precaution

The followings are precautions that you should always keep in mind. Any violation of one or more of the following precautions may cause damage to the player and will void the warranty.

- Avoid exposure to heat, moisture and static electricity.
- Do not drop or place a heavy objects on the player.
- Vibration or shock to the unit can cause damage.
- Do not allow the player near any liquid.
- Avoid areas of high humidity, strong magnetic fields, or sources of heat storing unit.
- Do not use thinner, alcohol, or benzene when cleaning the unit. This may change the color of the player or damage the surface. Use a soft towel to clean the surface of the player.

- To avoid damage to the unit, do not open the case.
- Do not leave in excess heat (over +60°C). To avoid damage from direct rays, do not leave in car, especially during the summer season.
- We strongly recommend that you back up your data for safety.

7. Troubleshooting

1) The player does not turn on:

- Check if the player has battery in.
- Turn on your computer and connect the player to the USB port, then turn on the player.
- If the above step does not resolve the problem, then run the “Firmware Download” program and format the player.

2) LCD display does not show anything:

- Press Play/Pause button to turn on the player.
- If the above step does not resolve the problem, then run the “Firmware Download” program and format the player.

3) For the Window 98 user – When PC doesn’t recognize the player.

- If your operating system is Windows 98, please connect the player to the USB port

of PC first and after it recognizes it as a new hardware, then install the driver.

- If your PC doesn't recognize the player, please do the following steps.
- If the above step does not resolve the problem, then run the "Firmware Download" program and format the player.

4) If the screen is blue without any display or the buttons do not respond, please reset the mp3 player using a sharp stick to press the reset key on the back of the player or connect the external battery once again and turn it on.

8. Limited warranty

The warranty is void when and if,

- Damage caused by careless handling of the product.
- Disassembling or altering of the product for other purposes.
- Damage caused by fire, earthquake, flood or other natural disasters.
- Damage caused by electric shock.
- Damage due to the improper repairing services received from other service centers.

9. Appendix

Specification

Model Name	TM889 (B type)
Size(mm)	57(L)*11(H)*38(W)
Weight	33g(BATTERY EXCLUDED)
Memory	Embedded 128MB or 256MB
Battery	AAA battery
LCD	96*26
Audio output	5mW
SNR	>90dB
Download speed	4Mbps
Compress rate	32KBPS-256KBPS
Record Format	WAV
Built-in capacity	64M/128M/256M
PC Interface	USB 1.1port

Features

- The major features of TM889 are;
- Easy to carry as it weighs only 33g.
- Playing MP3 and WMA digital audio files and stores the other data.
- 128/256MB built-in flash memory.
- Easy to connect TM889 into PC by using an extra USB
- Blue back-light
- One-touch voice recording (over 9 hours: 128MB, over 18 hours: 256MB)